



User guide.

Important safeguards.

Warning! To avoid the risk of serious injury, carefully read all instructions before operating your Magic Bullet Kitchen

ExpressTM. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

■ Save these instructions! FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electrical shock and injury to persons, do not immerse the appliance, motor base, cord, or plug in water or any other liquid.

- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Blades are sharp. Handle carefully.
- DO NOT BLEND HOT INGREDIENTS! Excessive pressure from heated ingredients can cause the vessel and base to separate and cause thermal injury. Only use room temperature or cooler ingredients.
- Do not attempt to defeat the cover interlock mechanism.
- Do not overfill the bowl, making sure to stay at or below the MAX line.
 Overfilling the bowl can cause damage to the

- bowl and can cause the ingredients to leak.
- To reduce risk of injury, never place chopping blade or discs on base without first attaching bowl properly in place.
- To prevent overheating and pressure build up, never allow the Magic Bullet Kitchen Express™ to run for more than one minute at a time. Ingredients can begin to heat up which will add pressure inside the cup or bowl that may cause it to separate from the motor base and cause personal injury or property damage

AVOID CONTACT WITH MOVING PARTS.

Regularly inspect the supply cord, plug, and power appliance for any damage. Do not operate any appliance with a damaged cord or plug or if the appliance malfunctions, or is dropped or damaged in any manner. Contact customer service by visiting Nutribullet.co.uk.

- The use of attachments not recommended or sold by Capital Brands Distribution, LLC may cause fire, electric shock, or injury.
- The use of attachments, including canning jars, not recommended by Capital

- Brands Distribution, LLC may cause a risk of injury to persons.
- This appliance is for household use only.
- Do not use this appliance for anything other than its intended use.
- Do not let the power supply cord hang over the edge of a table or counter top.
- Do not let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.

Always make sure the bowl is securely locked in place (with lid on and locked) before the motor is turned on. Do not attempt to remove the bowl or lid while the unit is in operation.

- Make sure the unit is turned off after each use.
 Ensure power is set to OFF, the motor has stopped, the blade or disc has completely stopped moving, and the unit is unplugged before disassembling.
- Turn motor off and ensure that all moving parts have stopped before disassembling this appliance to remove food.

- Never store the cross blade in the motor base without a cup attached. The exposed blades can present a very dangerous hazard.
- Do not use this appliance if any parts appear to be damaged. If you have any questions or concerns, please contact customer service.

FEED CHUTE

- Do not overload or jam the feed chute with too much food.
- When using the food pusher, never use excessive force to push food down the feed chute.
- Wait until food naturally moves down the feed chute and into the bowl before adding more food.
- Do not push food into the feed chute with your fingers or utensils. Only use food pusher provided. Do not place hand or fingers into the feed chute. If food becomes lodged in the feed chute, use the food pusher provided or another piece of fruit or vegetable to push it down.

ADDITIONAL SAFEGUARDS

- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- Prior to your first use, safely discard, out of reach of children, the protective cover on the power plug to eliminate a choking hazard.
- Do not put any non-food items in any of the appliance pieces, as doing so may damage the unit and or cause severe personal injury or property damage.
- Do NOT attempt to use the cup and blade assembly from another Magic Bullet with the Kitchen Express.
- Only use the cup and blade assembly that comes with your Kitchen Express unit.

Always make sure the unit is properly and completely assembled before connecting to power outlet and operating.

- Ensure that the surface where the appliance operates is stable, level, clean, and dry.
- Vibration may occur during normal operation.
- Any significant spillage onto the surface under or around the appliance, or onto the appliance itself, should be cleaned and dried before continuing to use the appliance.
- When using this appliance, provide adequate air space above, below, and on all sides for circulation.

This appliance is not intended to be an ice crusher. Attempting to crush ice may cause permanent damage to the cross blades or cause the unit to malfunction, resulting in personal injury or property damage.

Make sure you have removed any rind from fruit prior to adding to the bowl.

Do not use fruits that contain seeds or pits unless they have been completely removed. Do not leave the appliance unattended when in use.

Keep hands and utensils out of container while blending, and away from moving blades or discs while processing food, to reduce the risk of severe injury to persons or property damage. A scraper may be used but must be used BUT ONLY WHEN THE APPLIANCE IS OFF.

- Keep the appliance clean.
 Refer to the Care and
 Maintenance section for tips and best practices.
- Any maintenance other than cleaning should be performed by an authorized Service Center.

 Do not attempt to repair or service this appliance yourself. Contact customer service for assistance by visiting Nutribullet.co.uk.
- If you have any questions or comments or if some aspect of this user guide is not clear, please contact customer service for assistance by visiting Nutribullet.co.uk.

Save theseinstructions!

Contents.



- 07 What's included
- 08 Assembly guide
- 09 Using the food processor
 - 09 Chopping blade
 - 12 Disc
- 17 Using the blender
- 19 Power settings
- 20 Care and maintenance
 - 20 How to store
 - 20 Replacement parts
- 21 Magic Bullet Kitchen Express™ one-year limited warranty

Thank you for purchasing the Magic Bullet Kitchen $\mathsf{Express}^\mathsf{TM}$

What's included.

Assembly guide.



motor base



830mL cup work bowl



food pusher



bowl lid with feed chute



chopping blade



reversible slice/ shred disc




stainless steel cross blade



2 tall cups



to-go lid

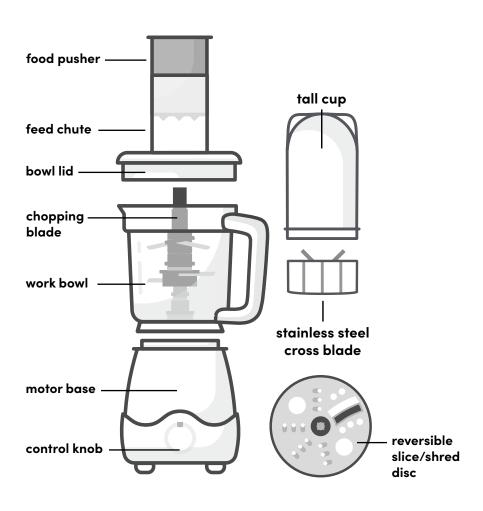

Using the food processor: chopping blade.



Place work bowl on a clean, dry, flat surface, like a counter top.



Carefully place the chopping blade onto the bowl shaft.




Add your food ingredients to the bowl. Remember to keep your hand and fingers out of the bowl and away from the chopping blade.



4 Place the bowl lid on top of the bowl and turn it clockwise to lock it into place. **NEVER** place hands, fingers, utensils, or any non-food items into the feed chute.

NOTE: The lid must be locked securely in place, or the motor will not run.

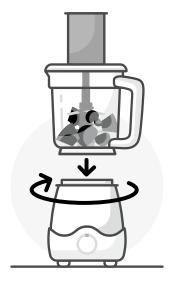

Place the work bowl on top of the motor base, and turn it clockwise to lock it in place.

NOTE: The bowl must be locked securely in place, or the motor will not run.



Turn the power control knob to ON or PULSE to activate the motor.



7 When you are finished, turn the knob to the **OFF** position.



Remove the bowl from the base by turning it counterclockwise. Place bowl on clean, dry, flat surface.



WARNING: ALWAYS wait until the blade has stopped moving before removing the bowl.

Using the food processor: disc



9 Remove the lid by turning it counter-clockwise to unlock.



10 Carefully remove the chopping blade and set it aside. Blade is sharp, handle with care.



1 Place the work bowl on a clean, dry, flat surface, like a countertop.



2 Carefully place the blade disc onto the bowl shaft, with the desired side facing UP.



11 Pour your food ingredients from the bowl.

WARNING: Never unload or pour food from bowl without first removing the chopping blade.




 
NOTE: Always use the two larger holes (finger holes) to handle the blade discs.



3 Place the bowl lid on top of the bowl and turn it clockwise to lock it into place. NEVER place hands, fingers, utensils, or any non-food items into the feed chute.

NOTE: The lid must be locked securely in place, or the motor will not run.

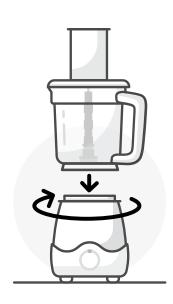




NOTE: The bowl must be locked securely in place, or the motor will not run.



5 If needed, cut your food so it will fit in the feed chute. Then place food into the chute.



6 Turn the power control knob to the **ON** position.

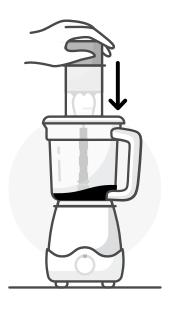

7 Always use the food pusher to guide food through the feed chute. NEVER place hands, fingers, utensils, or any non-food items into the feed chute.



8 When you are finished, turn the knob to the **OFF** position.



Remove the bowl from the base by turning it counterclockwise. Place bowl on clean, dry, flat surface.



WARNING: ALWAYS wait until the blade has stopped moving before removing the lid.



10 Remove the lid by turning it counter-clockwise to unlock.



11 Using finger holes, carefully remove the disc blade and set it aside. Blade is sharp, handle with care.



NOTE: Always use the two larger holes (finger holes) to handle the blade discs.



13 Pour your food ingredients from the bowl.

WARNING: Never unload or pour food from bowl without first removing the blade disc.

Using the blender: cup and cross blade.




1 Place the motor base on a clean, dry, flat surface, like a counter top.



2 Add ingredients into the Magic Bullet cup (making sure you do NOT exceed the MAX line).



Twist on the cross blade assembly until the cup and the blade assembly are sealed tight.

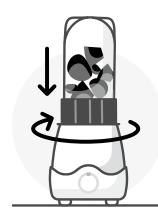

4 Turn the sealed cup upside down and place onto the motor base, turning it clockwise to lock the cup onto base.


NOTE: The cup must be locked securely in place, or the motor will not run.




5 Turn the power control knob to **ON** or **PULSE** to activate the motor.



warning: Never blend hot or carbonated ingredients, which can pressurize the sealed cup. Always use cool or room temperature ingredients. Never operate for more than one minute. The friction from the rotating blade can heat and pressurize the vessel, causing possible separation and personal injury.

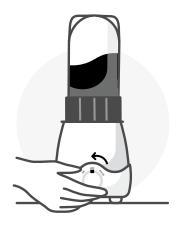

When you are finished, turn the knob to the **OFF** position.

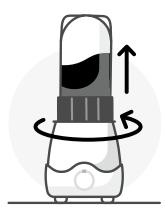


7 Remove the sealed cup from the motor base by turning it counter-clockwise to unlock.

WARNING: ALWAYS wait until the blades have stopped moving before removing the cup from the base.




Turn the sealed cup right side up (blade assembly on top), and twist off the blade assembly. Pour and enjoy!

Power settings.

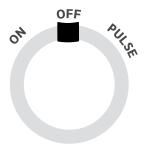

OFF

Power is off, unit is not running.

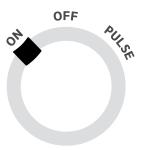


ON

Continuous blending or food processing action. The unit stays **ON** until you switch to **OFF**.



WARNING: Never leave the blender on for more than one minute!

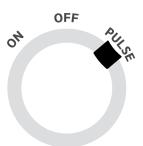

PULSE

Provides quick bursts of pulsing action for more control over the texture of your food or drink. You must hold the knob on PULSE to keep the unit on, otherwise the knob will automatically move to OFF.

Care & maintenance.

Cleaning the Magic Bullet Kitchen Express™ is easy. All components, except for the motor base, are dishwasher-safe.

STEP 1: The most important thing — ALWAYS POWER OFF THE UNIT and UNPLUG the motor base from the power outlet when it is not in use. Do not attempt to handle the appliance until all parts have stopped moving!

STEP 2: To start the cleaning process, empty the bowl, making sure little to no food scraps remain. Disassemble all parts. Make sure the blending cup/ cross blade and work bowl are not attached to the motor base.

STEP 3: Simply place any of the parts (except for the motor base) on the top rack of the dishwasher or hand wash with warm, soapy water and rinse. **NEVER** use the sanitize cycle as this may warp the cups or work bowl.



WARNING: Always be extremely careful when handling blades, as they are very sharp.

To pick up and handle the blade discs, always use the two larger finger holes in each disc.

MOTOR BASE:

 To avoid risk of injury, NEVER attempt to clean the actuator system on the motor base while the Magic Bullet Kitchen ExpressTM is plugged in.

- Do not attempt to remove any pieces from the motor base.
- Use a sponge or damp cloth to wipe down the motor base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it is clean (dried food particles can prevent the tabs from working properly).



WARNING: Never submerge the motor base in water or any other liquid.

How to store:

When not in use, store all pieces of the unit together in a safe place where they will not be damaged and won't cause harm.

Replacement parts:

To order additional parts and accessories, please visit our website at Nutribullet.co.uk..

Save these • instructions!

Magic Bullet Kitchen Express™ one-year limited warranty.

LIMITED WARRANTY FOR MAGIC BULLET KITCHEN EXPRESS™

The Magic Bullet[®] limited warranty obligations are confined to the terms set forth below:

Homeland Housewares, LLC, warrants the Magic Bullet Kitchen Express™ against defects in materials and workmanship for a period of one year from the date of original retail purchase. This limited warranty is valid only in the country in which the product is purchased and comes with the product at no extra charge, however shipping and processing fees will be incurred for returns, replacements and or refunds. If a defect exists, and Capital Brands Distribution, LLC is obligated under this limited warranty, at its option Capital Brands Distribution, LLC will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or that has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product assumes the remaining warranty of the original product. A repaired product has a oneyear warranty from the date of repair. When a product or part is exchanged, any replacement item becomes vour property and the replaced item becomes Capital Brands Distribution,

LLC's property. When a refund is given, your product becomes Capital Brands Distribution, LLC's property.

OBTAINING WARRANTY SERVICE

For limited warranty service, simply visit HighStreetTV.com/Support. When you contact our customer service department, you will be asked to provide your name, address, telephone number, and proof of the original purchase (receipt) containing a description of the product(s), purchase date, and the appropriate Magic Bullet® bar code(s). Before sending your product for limited warranty service, please make sure to keep a copy of all relevant documents for your files (receipt, etc.). It is always recommended to purchase product insurance and tracking services when sending your product for service. Remember, shipping and processing fees will be incurred and are not covered by the one-year limited warranty.

EXCLUSIONS & LIMITATIONS

This Magic Bullet Kitchen Express™
One-Year Limited Warranty applies only
to Magic Bullet® products distributed
by or for Capital Brands Distribution,
LLC that can be identified by the "Magic
Bullet Kitchen Express" trademark,
trade name, logo, and bar code. The
Magic Bullet Kitchen Express's One-Year
Limited Warranty does not apply to any
other products that may appear to be
authentic, but were not distributed/sold

by Capital Brands Distribution, LLC.

Normal wear and tear is not covered by this limited warranty.

This limited warranty applies to consumer use only, and is void when the product is used in a commercial or institutional setting. This limited warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.

Repair or replacement of the product (or, if repair or replacement is not feasible, a refund of the purchase price) is the exclusive remedy of the consumer under this limited warranty. Capital Brands Distribution, LLC shall not be liable for any incidental or consequential damages for breach of this limited warranty or any implied warranty on this product.

This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Capital Brands Distribution, LLC is not liable for any damage to products not covered by this warranty (e.g., cups, book, User Guide).

This limited warranty does not apply:
(a) to damage caused by accident,
abuse, misuse, or misapplication;
(b) to damage caused by improper
maintenance (including unauthorized
parts service); (c) to a product or a
part that has been modified in any
way; (d) if any Magic Bullet® serial
number, bar code, or trademark has
been removed or defaced; and/or (e)
if the product has been used with an
adapter/converter.

THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. CAPITAL BRANDS DISTRIBUTION, LLC SPECIFICALLY DISCLAIMS ANY AND

ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF CAPITAL BRANDS DISTRIBUTION, LLC CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY.

No Capital Brands Distribution, LLC reseller, agent, or employee is authorized to make any modification to this warranty. reseller, agent, or employee is authorized to make any modification to this warranty.

CAPITAL BRANDS DISTRIBUTION,
LLC IS NOT RESPONSIBLE FOR
DIRECT, SPECIAL, INCIDENTAL OR
CONSEQUENTIAL DAMAGES RESULTING
FROM ANY BREACH OF WARRANTY
OR CONDITION, OR UNDER ANY
OTHER LEGAL THEORY, INCLUDING
BUT NOT LIMITED TO LOST PROFITS,
DOWNTIME, GOODWILL, DAMAGE TO
OR REPLACEMENT OF EQUIPMENT
AND PROPERTY. CAPITAL BRANDS
DISTRIBUTION, LLC SPECIFICALLY DOES
NOT REPRESENT THAT IT WILL BE ABLE
TO REPAIR ANY PRODUCT UNDER THIS
LIMITED WARRANTY.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or province.

EN/Explanation of the marking



EN/This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environ ment or human health from uncontrolled waste disposal; recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling



EN/The transport and protective packing has been selected from materials, which are environmentally friendly for disposal and can be recycled. Ensure that any plastic, wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Rather than just throwing these materials away, recycle them



EN/A Class II or double insulated electrical appliance is one which has been designed in such a way that it does not require a safety connection to electrical earth (ground).



EN/Manufacturer's declaration that product meets the requirements of the applicable EC directives

Distributed by: High Street TV Group Limited PO Box 7903 Corby, NN17 9HY Manufactured for: NUTRIBULLET, LLC LOS ANGELES, CA 90025, USA



Need help? We're here for you

Visit NutriBullet.co.uk for:



FAQ'S



Video Guides



Recipes



Register your product







23

MAGIC BULLET® and MAGIC BULLET KITCHEN EXPRESS™ are the registered trademarks of Capbran Holdings, LLC. | nutribullet.co.uk Copyright © 2020, Capbran Holdings, LLC. Distributed by Capital Brands Distributions, LLC, Los Angeles, CA 90025. All rights reserved. Made in China.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein

MB09200_201204

are subject to change without notice.